

For more add-on packs please visit:

http://learn.makeblock.com/en/mbot-add-on-packs/

For more information, please scan the QR code bellow with your smart device:



mBot Servo Pack

If you have any questions or concerns about our products, please do not hesitate to contact us!

Makeblock Co., Ltd.

Technical support: www.makeblock.com/support

Tel: +86(0)755-26392228

Address: 4th Floor, Building C3, Nanshan iPark, No.1001 Xueyuan Avenue,

Nanshan District, Shenzhen, Guangdong Province, China 518055








Index

mBot Add-on Pack Contents (1:1) ······	02
Construction Knowledge for the add-on pack······	03
Dancing Cat·····	07
Head-Shaking Cat·····	13
Light-Emitting Cat······	19

mBot Add-on Pack Contents (1:1)

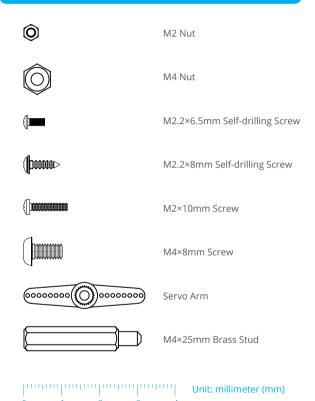

Any unknown parts can be checked here.


Construction Knowledge for the add-on pack

1. Adjust servo

You need to adjust the servo in order to make it rotate to a certain angle as precisely as you want. You can adjust it with mBlock, mBlockly and MakeBlock in three steps, as follow:

1.1 Wire connections

Befor adjusting servo, you need to prepare mCore, RJ25 adapter module and the servo to be adjusted. Connect the wires as follows. Connect RJ25 adapter module to the Port4 of mCore and connect servo to the slot2 of RJ25 adapter module.

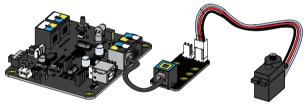

1.2 Adjust servo with software


1 Adjust servo with mBlockly

Firstly, you should connect mBlockly to your mCore, then develop program as follow. After that, click "Go" to see the servo automatically rotate to 90° .



2 Adjust servo with mBlock

Firstly, you should connect mBlock to your mCore, then develop program as follows. After that, click "Start"(the green flag) to see the servo automatically rotate to 90°.

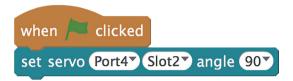


3 Adjust servo with MakeBlock


Firstly, you should connect MakeBlock to your mCore, then develop program as follow. After that, click button to see the servo automatically rotate to 90°.



1.3 Install servo arm

Intall servo arm to the servo as follows (pay attention to their angle).

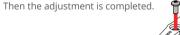

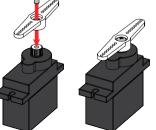


2.Install parts to servo

Insert self-drilling screws through the parts, then torque them into corresponding holes on servo arm to fix the parts.



If installing parts to the servo arm is difficult, you can torque the self-drilling screws into corresponding holes and then spin them out, so that to expand the size of the holes for easier installation.

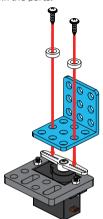

3. Controlling and programming


You can use mBlock or Makeblock App to program your cat after the construction.

mBot also supports mBlock programming. We already prepared some examples for you. To download the examples please visit: http://learn.makeblock.com/en/mbot-add-on-packs/ Makeblock App have added new control panels for mBot servo pack, so now you can control your cat more quickly. To download Makeblock App please visit:

http://learn.makeblock.com/en/makeblock-app/

Dancing Cat

mBot Class mBot Add-On Pack

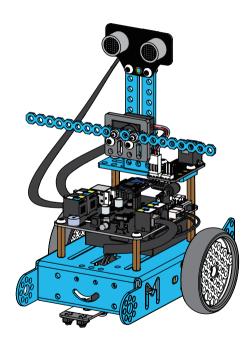

Dancing Cat

mBot Servo Pack- Dancing Cat


If your mBot already has an mCore case, please keep it for later construction.


Step 1

Step 1		_		Ų		
M4×25mm Brass Stud	×2	Ţ		. T	Ψ	
M4×8mm Screw	×2				.	
				700		B
	1	\				P
	/%	. 0	0 0		(00 x) (00 x)	AIII

Step 2


Plate I1-Blue	×1
Bracket 3×3	×1
M4×8mm Screw	×2
M4 Nut	×2

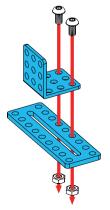

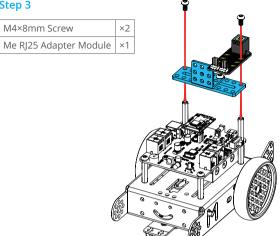


Step 4

Plate I1-Blue	×1
M4×8mm Screw	×2
M4 Nut	×2

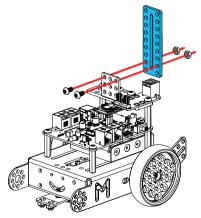


Step 5

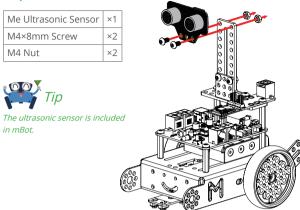

Step 6

Firstly, you should adjust servo to 90 degrees with software, then install servo arm to the servo (pay attention to their angle).


9g Micro Servo Bracket ×1 Servo Arm ×1 M2×10mm Screw ×2 M2 Nut ×2
M2 Nut ×2
M2.2×6.5mm ×1
Self-drilling Screw

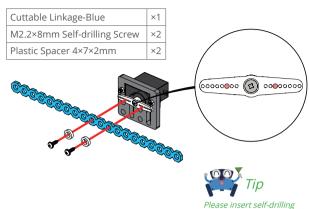

screw through the hole


marked red.

Step 8

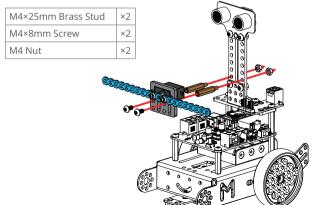


Step 9 Wire connections

This is the reference picture of wire connections in construction examples. You can also change the ports according to your own program.

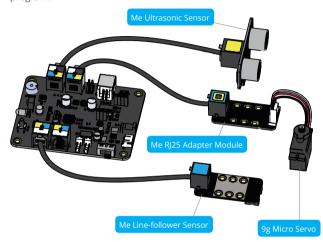


Good job!

You have finished the construction. Now you can control your Dancing Cat according to the constructions on page 5.

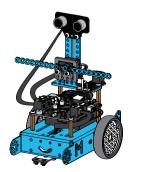

Head-Shaking Cat

mBot Class mBot Add-On Pack

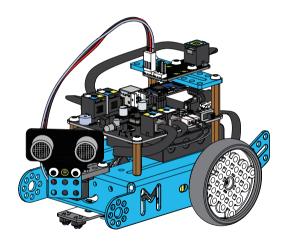


Head-Shaking Cat


mBot Servo Pack- Head-Shaking Cat

If your mBot already has an mCore case, please keep it for later construction.

Step 1	_	_		m
M4×25mm Brass Stud	×2		Y	
M4×8mm Screw	×2			Ţ
				-
	ſ			<mark>₼</mark>
			3000	
(10 6	
`		S 6: [

Step 2

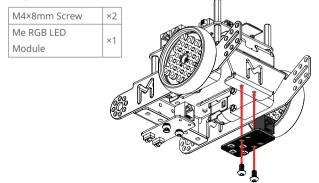

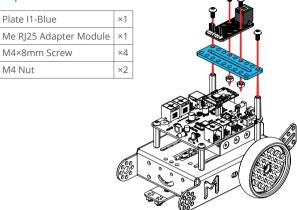


Step 4

Firstly, you should adjust servo to 90 degrees with software, then install servo arm to the servo (pay attention to their angle).


9g Micro Servo	×1
9g Micro Servo Bracket	×1
Servo Arm	×1
M2×10mm Screw	×2
M2 Nut	×2
M2.2×6.5mm Self-drilling Screw	×1



Step 5

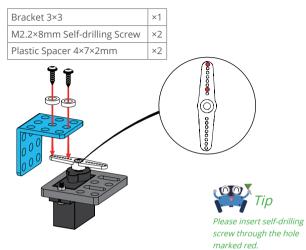

Step 6

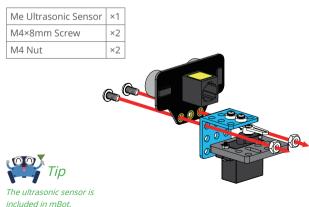


M4×8mm Screw

×2




If these two holes on your mBot are without thread, please fix the parts with M4 nuts.

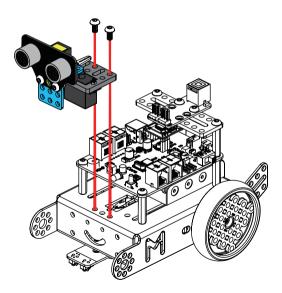

Step 8 Wire connections

This is the reference picture of wire connections in construction examples. You can also change the ports according to your own program.

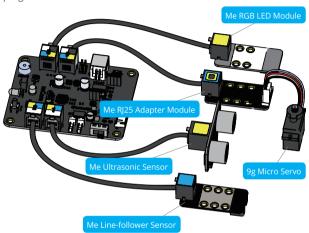

Good job!


You have finished the construction.

Now you can control your

Head-Shaking Cat according to the constructions on page 5.

Light-Emitting Cat

mBot Class mBot Add-On Pack

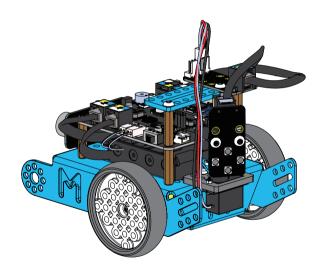

Light-Emitting Cat


mBot Servo Pack- Light-Emitting Cat

If your mBot already has an mCore case, please keep it for later construction.

Step 1	î ÎN V
M4×25mm Brass Stud	×2
M4×8mm Screw	×2
	CO M CO M CO

Step 2


Firstly, you should adjust servo to 90 degrees with software, then install servo arm to the servo (pay attention to their angle).

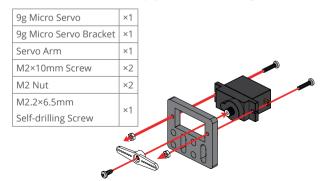

Bracket 3×3	×1	Tip
M2.2×8mm	×2	Please insert self-drilling
Self-drilling Screw	^_	screw through the hole
Plastic Spacer 4×7×2mm	×2	marked red.
(cooco@co		0000000

Step 4

Me RGB LED Module	×1
M4×8mm Screw	×2
M4 Nut	×2

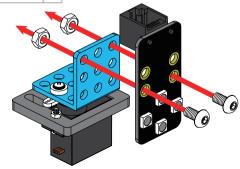

Step 5


M4×8mm Screw ×2

Tip

If these two holes on your mBot are without thread, please fix the parts with M4 nuts.


Step 6

M4×8mm Screw	×1
M4 Nut	×1
Me RJ25 Adapter Module	×1

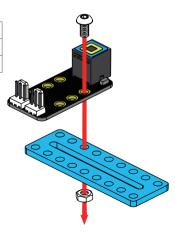


M4×8mm Screw

×2

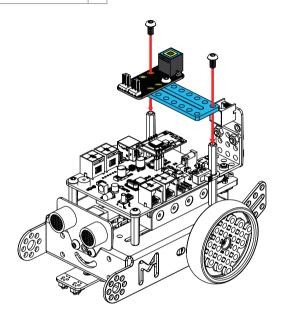

Step 8 Wire connections

This is the reference picture of wire connections in construction examples. You can also change the ports according to your own

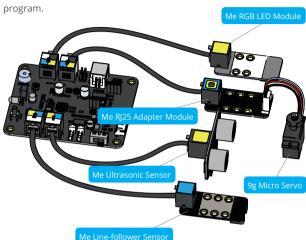

Good job!

You have finished the construction. Now you can control your Light-Emitting Cat according to the constructions on page 5.

